



ABN: 69150916840

5A Hartnett Close, Mulgrave, VIC 3170 | www.evolveplus.com.au

Instructions - How To Change Batteries On USB People Counters (Receiver Unit).



Step 1: Unscrewing The Front Cover

Unscrew the front cover from the back plate and remove the front cover. To remove the front cover, you must pull it up from the bottom (as seen in the second image).



Step 2: Replacing Batteries

Change the batteries. Ensure when the batteries are changed, the LED flashes RED and then GREEN. If you don't see this sequence of LED flashes, remove the batteries and try again.

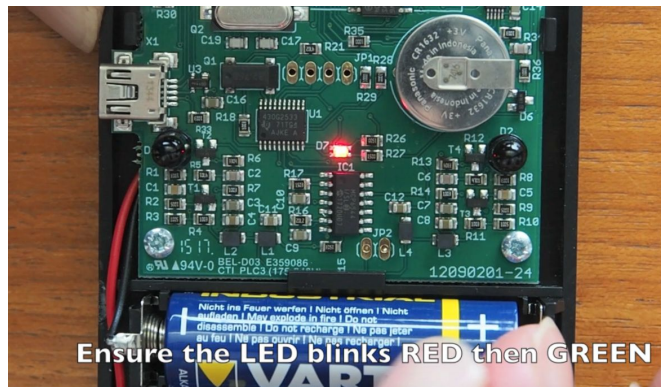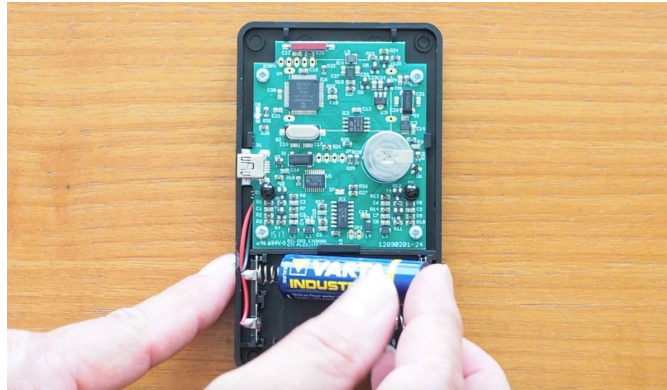

Step 3: Putting The Front Cover Back On

Start by making sure the top of the counter is on first before connecting it to the bottom. If the Front Cover is put on from the bottom, it won't sit correctly on the people counter. The final part of this step is to re-screw the front plate on as seen in the second image.



Instructions - How To Change Batteries On USB People Counters (Transmitter Unit).



Step 1: Unscrewing The Front Cover

Unscrew the front cover from the back plate and remove the front cover. To remove the front cover, you must pull it up from the bottom (as seen in the second image).



Step 2: Replacing Batteries

Change the batteries. Ensure when the batteries are changed, press the 'ACTIVATE' button (see the second image). the LED will then flash RED, If you don't see this, remove the batteries and try again.

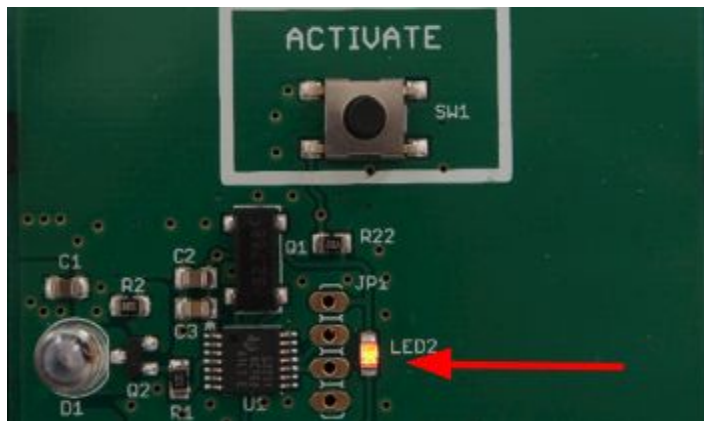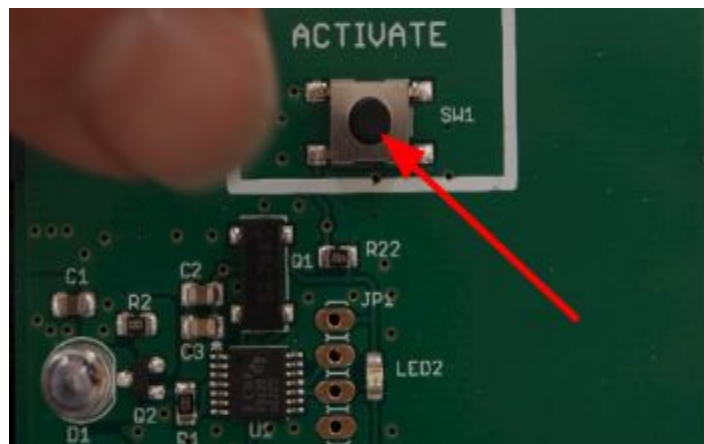

Step 3: Putting The Front Cover Back On

Start by making sure the top of the counter is on first before connecting it to the bottom. If the Front Cover is put on from the bottom, it won't sit correctly on the people counter. The final part of this step is to re-screw the front plate on as seen in the second image.

